

CONNECTION



Plug EVAC•U•MAX into 110 volt outlet.

OPERATION



Select appropriate adapter to fit into desired fluid reservoir, and connect to machine's red service hose.

Insert adapter into reservoir. If extracting oil or transmission fluid, insert nylon tube down dipstick tube the same length as the dipstick.



Open ball valve on hose.
Flip switch on control panel to "SUCTION" position.



When complete, flip switch to "OFF" position.
Close ball valve on hose.



DRAINING WASTE TANK



SEARS DRAIN CONNECTION:

Connect waste tank connector line to waste tank port on machine. Drain fluid into approved waste container.



MACHINE DRAIN:

Connect open end hose to machine's black service hose, and insert into approved waste container.

Open ball valve on hose.



Flip switch on control panel to "DRAIN" position.

When complete, flip switch to "OFF" position, and close ball valve on hose.

